



Instructions for Maintenance – Immobilizer

(Component Type Approval – UN R97 / UN R116)

APTIV supplies immobilizers to car manufacturers. For official maintenance instructions, please refer to your vehicle's owner's manual.

The immobilizer component **does not require periodic maintenance** under normal operating conditions.

To ensure continued conformity with the approved type:

- The immobilizer shall be operated only within the electrical parameters defined for the approved system.
- Proper functionality depends on a stable and compliant vehicle power supply; abnormal voltage conditions may temporarily affect immobilizer performance.
- The immobilizer shall not be opened, modified, adjusted or repaired outside the scope defined in the approved technical documentation.
- Repairs or replacements shall be performed exclusively using approved parts and in accordance with manufacturer-authorized procedures.
- Any unauthorized modification, repair, or substitution of components may lead to non-compliance with the approved type and invalidate the UN R97 / UN R116 approval.

The immobilizer contains no serviceable parts accessible to the user or installer.